 


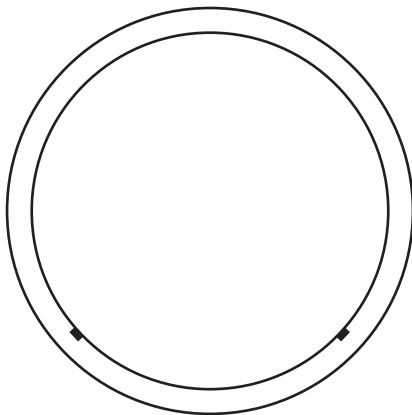

Optical Smoke Alarm

Jacob Jensen



Read this booklet before using the product and save it for future reference.

This Jacob Jensen Smoke Alarm has an optical sensor and is therefore free from radioactive substances. The Smoke Alarm is intended for private residences.

This Optical Smoke Alarm complies with
EN 14604:2005/AC:2008

Know your Optical Smoke Alarm	4
Using your Optical Smoke Alarm	5
Mounting your Optical Smoke Alarm	8
QR-code for full user manual online	10

Know your Optical Smoke Alarm

1

Test/Reset Button

Used to test the function and reset the alarm.

2

Red and green LED

Indicates operation, test, and alarm memory

3



Siren

Emits a minimum of 85 dB when the alarm is triggered.

4

Mounting Plate

For attachment to the ceiling.

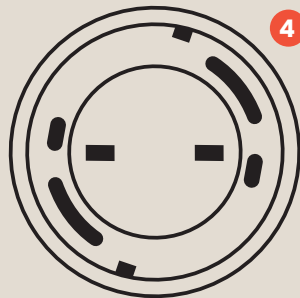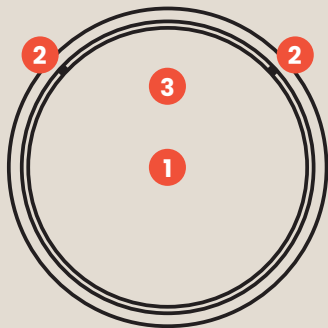


Using your Optical Smoke Alarm

How to activate your Optical Smoke Alarm

Before first use, move the red activation pin from the **OFF (1)** position to the **ON (2)** position.

Tilt the pin down so that it is securely locked in the notch on the back of the smoke alarm. The pin can be used again if the alarm needs to be deactivated, e.g. when moving house.

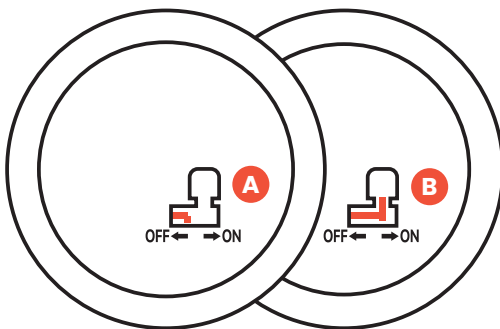

Testing the smoke alarm

- Always test the smoke alarm once a year and after you have been away.
- Hold down the test button until the alarm starts. When the button is released, the alarm may continue for up to 10 seconds.
- Check that the red LED flashes approximately every 5 minutes.

Resetting the alarm

- If the alarm is triggered by, for example, steam or smoke from cooking, you can turn it off by pressing the test button.

Maintenance

Clean the smoke alarm once a month.

- Use a vacuum cleaner on a low setting across the front and along the edges.
- A soft brush attachment on the vacuum cleaner is recommended.
- Alternatively, the unit can be wiped with a slightly damp cloth.
- Be careful not to scratch the surface

Battery Life


- The smoke alarm has a built-in 3V battery with a lifespan of up to **10 years** under normal use.
- When the battery is nearing the end of its life, the alarm will emit **3 beeps every 43 seconds** for approximately 30 days.
- The battery cannot and must not be replaced. The entire smoke alarm must be replaced.


Disposal

- When the battery is depleted (after approx. 10 years), the smoke alarm must be disposed of as **electronic waste (WEEE)**.
- Proper disposal helps preserve resources and prevents health and environmental hazards caused by hazardous materials. It must not be disposed of with household waste.
- Return the product to your local recycling center.

Mounting your Optical Smoke Alarm

- Always install on the ceiling, at least **60 cm** from walls and corners.
- At minimum, one smoke alarm should be placed between the bedrooms and potential fire sources (kitchen, utility room, living room, garage, etc.).
- There should be no more than **10 meters** between each smoke alarm.
- Additional safety is achieved by installing alarms in all living areas.
- It is not recommended to install the smoke alarm at the peak of a pitched ceiling or in a dead angle where smoke will not accumulate. These areas are indicated in grey in the illustration.

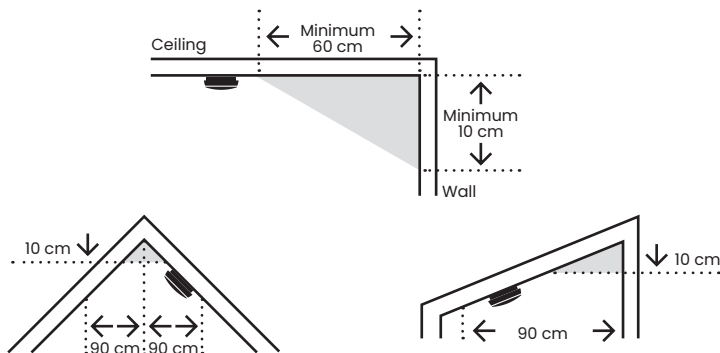

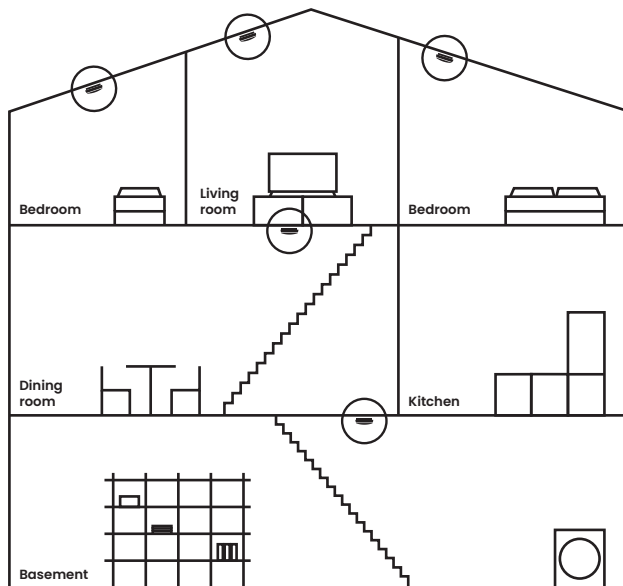



Scan the QR-code for quick access to Jacobjensen.com where you can find the full user manual for Optical Smoke Alarm.

- EN: A complete user manual can be found on our website at jacobjensen.com. Scan the QR-code for quick access.
- DA: En komplet brugervejledning findes på vores hjemmeside på jacobjensen.com. Scan QR-koden for hurtig adgang.
- SV: En komplett bruksanvisning finns på vår webbplats på jacobjensen.com. Skanna QR-koden för snabb åtkomst.
- NO: En komplett brukerveiledning finnes på vårt nettsted jacobjensen.com. Skann QR-koden for rask tilgang.
- NL: Een volledige handleiding is te vinden op onze website jacobjensen.com. Scan de QR-code voor snelle toegang.
- FR: Un manuel d'utilisation complet est disponible sur notre site web jacobjensen.com. Scannez le code QR pour un accès rapide.
- DE: Lesen Sie die vollständige Bedienungsanleitung online, bevor Sie das Gerät verwenden. Scannen Sie den QR-Code für alle Sicherheitshinweise.
- ES: Un manual de usuario completo se encuentra en nuestro sitio web jacobjensen.com. Escanee el código QR para un acceso rápido.

- IT: Un manuale utente completo è disponibile sul nostro sito web jacobjensen.com. Scansiona il codice QR per un accesso rapido.
- PL: Pełną instrukcję obsługi można znaleźć na naszej stronie internetowej jacobjensen.com. Zeskanuj kod QR, aby uzyskać szybki dostęp.
- FI: Täydellinen käyttöopas löytyy verkkosivuiltamme jacobjensen.com. Skannaa QR-koodi nopeaa pääsyä varten.
- CS: Úplný uživatelský manuál naleznete na našich webových stránkách jacobjensen.com. Naskenujte QR kód pro rychlý přístup.
- PT: Um manual de utilizador completo pode ser encontrado no nosso site jacobjensen.com. Digitalize o código QR para acesso rápido.
- SK: Kompletný používateľský manuál nájdete na našej webovej stránke jacobjensen.com. Naskenujte QR kód pre rýchly prístup.
- LV: Pilnu lietotāja rokasgrāmatu var atrast mūsu tīmekļa vietnē jacobjensen.com. Skenējiet QR kodu ātrai piekļuvei.
- LT: Pilną naudotojo vadovą rasite mūsų svetainėje jacobjensen.com. Nuskaitykite QR kodą, kad greitai pasiektumėte.
- ET: Täielik kasutusjuhend on leitav meie veebisaidilt jacobjensen.com. Skaneerige QR-kood kiireks juurdepääsuks.
- TR: Tam kullanıcı kılavuzu web sitemizde jacobjensen.com adresinde bulunabilir. Hızlı erişim için QR kodunu tarayın.
- EL: Ένα πλήρες εγχειρίδιο χρήσης μπορείτε να βρείτε στον ιστότοπό μας στο jacobjensen.com. Σαρώστε τον κωδικό QR για γρήγορη πρόσβαση.

Product by
F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Denmark



EN 14604: 2005/AC: 2008

Jacob Jensen

Version 02.2025