


# Quick guide

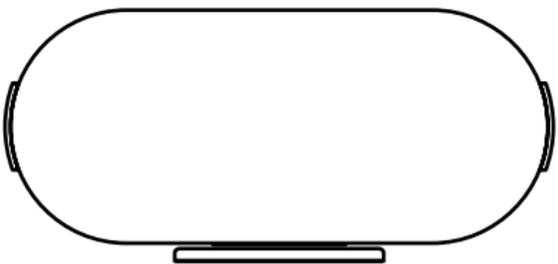

## Alarm Clock

Jacob Jensen

Read this booklet  
before using and save it  
for future reference.

Know your Alarm Clock

4

Using your Alarm Clock

6


Mounting your Alarm Clock

8

Full user manual

10

3

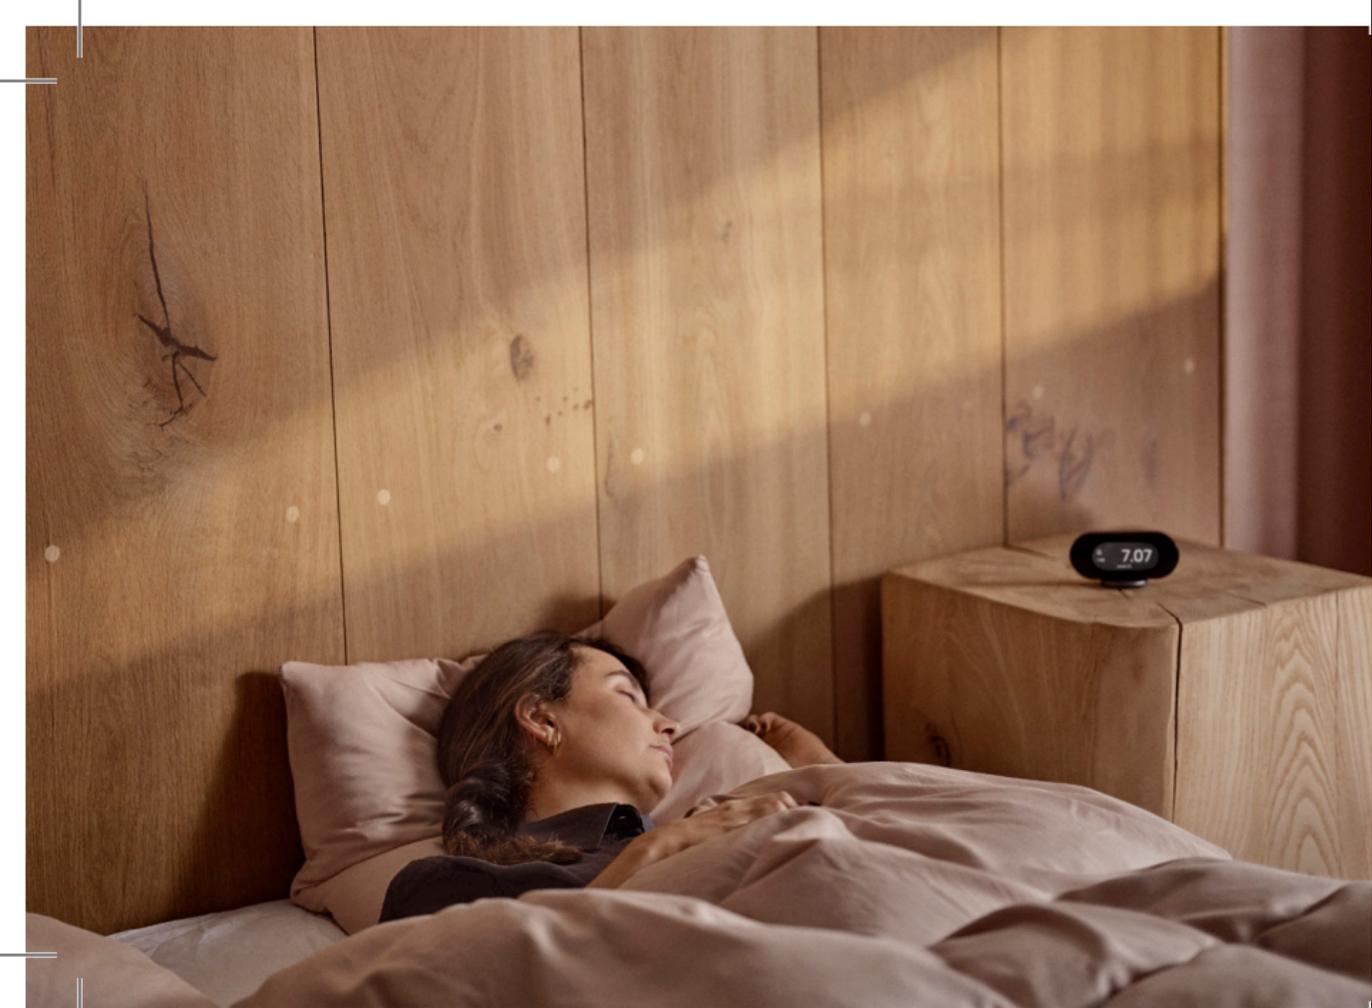

# Know your Alarm Clock

**A** E-Ink Display

**B** Light / Snooze

Press to activate display light.  
During alarm, press to activate snooze function.

**C** Alarm On/Off

Press to activate/deactivate alarm.

**D** Battery Compartment

Uses 2 CR2450 button cell batteries.

**E** Volume Adjust

Choose between high or low alarm volume.

**F** Alarm Tune Selector

Choose between high or low alarm volume.

**G** Clock Set


Press to adjust date and time.

**H** Alarm Set

Press to adjust wake up time.

**I** Step Up / Down, DST On/Off

Press and hold both buttons for 3 sec. to turn Daylight Savings Time on or off.

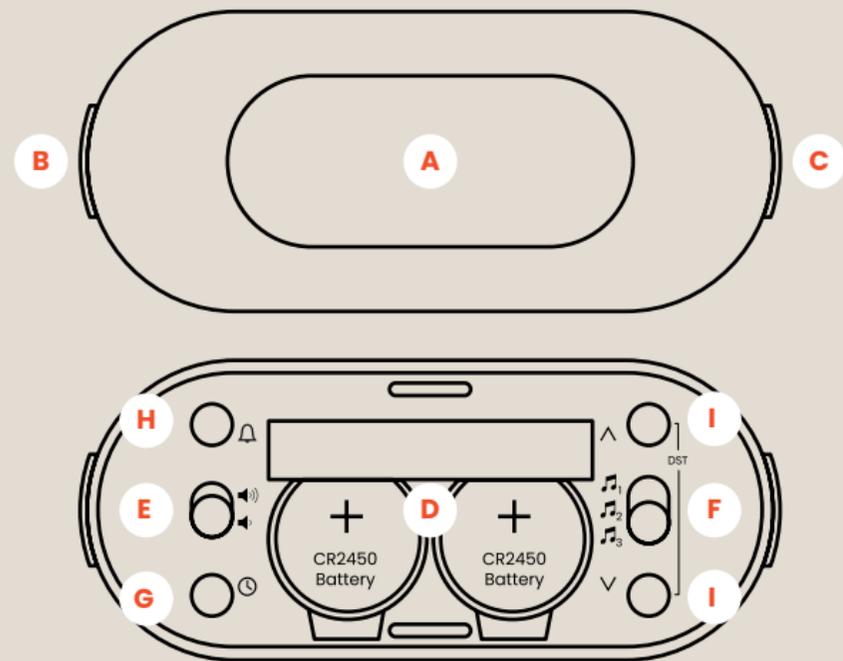

# Using your Alarm Clock

## How to set the time

When using the Alarm Clock for the first time, a message on the screen will prompt you to insert batteries. Please use two CR2450 button cell batteries.

To enter Time Setting Mode, remove the magnetic back cover using your finger nail in the small groove on the bottom edge and lifting cover off. Press  once and the screen will guide you through setting year, day, time format and time.

Use  /  to choose the correct setting and press  again to save step and move on to the next setting.

If you choose 12-hour format, "AM/PM" will be displayed on the screen. While in Setting Mode, if no buttons are pressed for 20 seconds, the alarm clock will exit the setting mode automatically.

## Setting the alarm

The default alarm time is set for 7.15. To change the alarm press  to enter the

Alarm Setting Mode. Use the  /  buttons to choose the time you want the alarm to sound, confirming each step by pressing the . Pressing and holding the  or  button for more than 2 seconds will advance the number by 3 steps for hours and 5 for minutes, for quicker setting.

To activate the alarm, press the Alarm On/Off button once on the right side of the alarm clock. The set alarm time will be displayed under the -icon alongside the current time and date. If no alarm is displayed on the screen, it means no alarm is activated.

When the alarm rings, you can push the SNOOZE button, , to pause the alarm for 9 minutes. The alarm will sound for 2 minutes. Press the Alarm On/Off button, , once to pause the alarm for a day. The alarm will sound again at the set time the following day. Press the Alarm On/Off button once more to deactivate the alarm completely.

Choose one of the three specially designed tones to wake you:

 **Sunshine Melody** – A special composition to wake you gently

 **Forrest Birds** – Birdsong from the Danish forrest

 **Beep Up** – A comfortable series of beeps

# Mounting your Alarm Clock

## Table Stand


Your new Alarm Clock comes with a magnetic table stand, which lets you easily place it on a table or night stand.

## Wall Mounting

The Alarm Clock also comes with a magnetic wall bracket, which can be fixed to a smooth vertical surface using the included adhesive pad, or Ø3mm screws (not included) appropriate for the material to screw into.

N.B.: Make sure when you place the adhesive pad and mount the bracket, that the side with the Jacob Jensen logo faces away from the wall.

## Wall Bracket

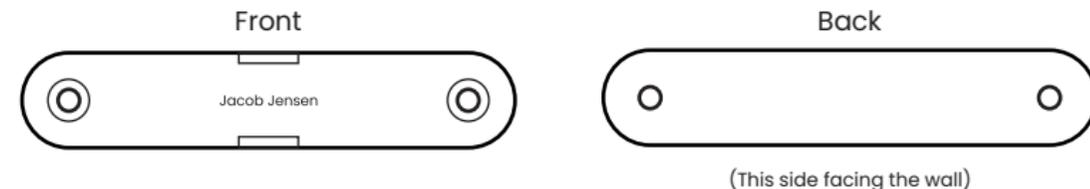

## For your safety

1. Do not ingest battery, as it may cause chemical burns.
2. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
3. Keep new and used batteries away from children.
4. If the battery compartment does not close securely, stop using the product and keep it away from children.
5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Scan the QR code for quick access or visit [jacobjensen.com](http://jacobjensen.com).

- UK A complete user manual can be found on our website at [jacobjensen.com](http://jacobjensen.com). Scan the QR code for quick access.
- DK En komplet brugermanual kan findes på vores hjemmeside på [jacobjensen.com](http://jacobjensen.com). Scan QR-koden for hurtig adgang.
- SE En komplett användarmanual finns på vår hemsida [jacobjensen.com](http://jacobjensen.com). Skanna QR-koden för snabb åtkomst.
- NO En komplett brukermanual finner du på vår nettside på [jacobjensen.com](http://jacobjensen.com). Skann QR-koden for rask tilgang.
- NL Een volledige gebruikershandleiding kunt u vinden op onze website [jacobjensen.com](http://jacobjensen.com). Scan de QR-code voor snelle toegang.
- FR Un manuel d'utilisation complet est disponible sur notre site Web à l'adresse [jacobjensen.com](http://jacobjensen.com). Scannez le code QR pour un accès rapide.
- DE Eine vollständige Bedienungsanleitung finden Sie auf unserer Website unter [jacobjensen.com](http://jacobjensen.com). Für schnellen Zugriff scannen Sie den QR-Code.



Product by  
F&H Group A/S  
Gl. Skivevej 70  
8800 Viborg  
Denmark



This mark on a product and/or accompanying documents indicates that when it is to be disposed of it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be saving valuable resources and preventing potential negative effects upon human health and the environment from hazardous materials that the waste may contain.

For additional product  
documentation, please visit  
[jacobjensen.com](http://jacobjensen.com)

Jacob Jensen

Version 01.2024