


Quick guide

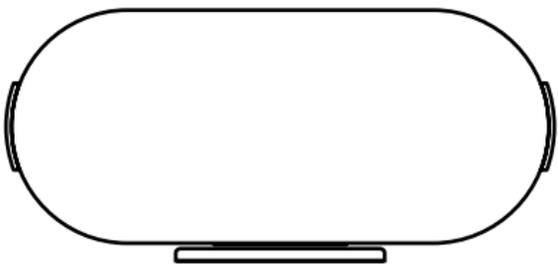

Climate Station

Main Unit

Jacob Jensen

Read this booklet
before using and save it
for future reference.

Know your Climate Station

4

Using your Climate Station

6

Mounting your Climate Station

8

Full user manual


10

3



Know your Climate Station

- A E-Ink Display**
- B Sensor Toggle Up/Down**
Press to toggle through connected optional sensor locations.
- C Batteries**
Uses 2 CR2450 button cell batteries.
- D Celsius / Fahrenheit switch**
Choose to show temperature in Celsius or Fahrenheit.
- E Link**
Press to link an optional external sensor.

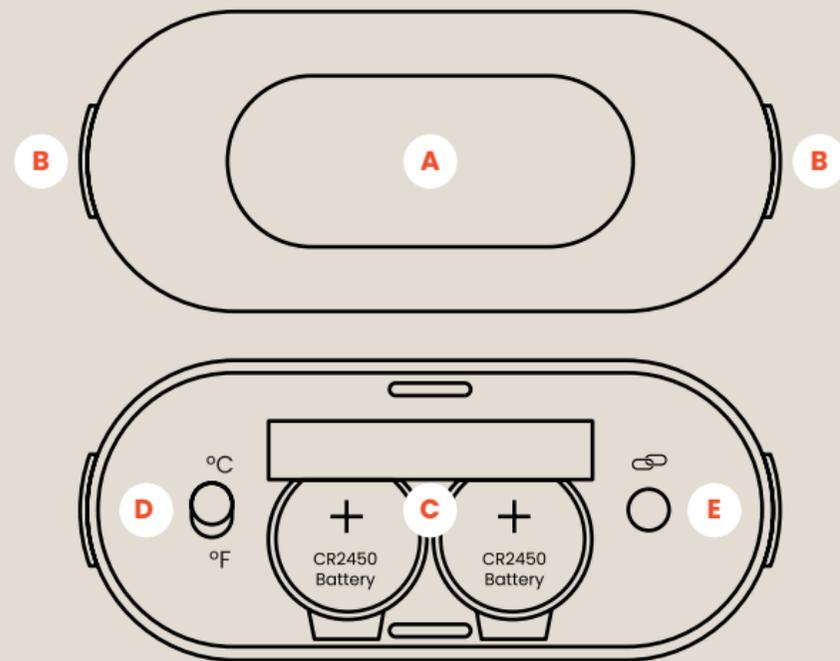

Using your Climate Station

How to use

To activate your new Climate Station, insert two CR2450 button cell batteries, and you are ready to go. Your Climate Station will display the temperature and humidity, where it is placed indoors.

Adding Sensors

Your Climate Station can be paired with Jacob Jensen Sensor units, which will let you see temperature and humidity in more places around your home, inside or outside, all from your main unit.

You can add up to 4 Jacob Jensen Sensors to your main unit, and choose from 16 predefined location names.

To connect a sensor to your Climate Station, follow the instructions that come with the Sensor unit when purchased, or find it on our website.

Sensor unit is sold separately.

For your safety

1. Do not ingest battery, as it may cause chemical burns.
2. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
3. Keep new and used batteries away from children.
4. If the battery compartment does not close securely, stop using the product and keep it away from children.
5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Mounting your Climate Station


Table Stand

Your new Climate Station comes with a magnetic table stand, which lets you easily place it on a table or night stand.

Wall Mounting

The Climate Station also comes with a magnetic wall bracket, which can be fixed to a smooth vertical surface using the included adhesive pad, or Ø3mm screws (not included) appropriate for the material to screw into.

The Climate Station should not be mounted more than 2 meters above the floor.

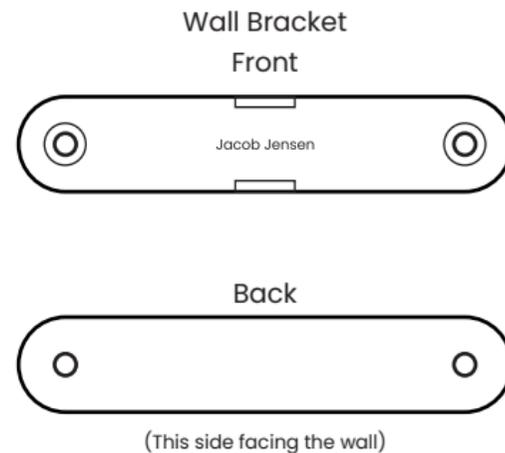

N.B.: Make sure when you place the adhesive pad and mount the bracket, that the side with the Jacob Jensen logo faces away from the wall.



Scan the QR code for quick access or visit jacobjensen.com.

- UK A complete user manual can be found on our website at jacobjensen.com. Scan the QR code for quick access.
- DK En komplet brugermanual kan findes på vores hjemmeside på jacobjensen.com. Scan QR-koden for hurtig adgang.
- SE En komplett användarmanual finns på vår hemsida jacobjensen.com. Skanna QR-koden för snabb åtkomst.
- NO En komplett brukermanual finner du på vår nettside på jacobjensen.com. Skann QR-koden for rask tilgang.
- NL Een volledige gebruikershandleiding kunt u vinden op onze website jacobjensen.com. Scan de QR-code voor snelle toegang.
- FR Un manuel d'utilisation complet est disponible sur notre site Web à l'adresse jacobjensen.com. Scannez le code QR pour un accès rapide.
- DE Eine vollständige Bedienungsanleitung finden Sie auf unserer Website unter jacobjensen.com. Für schnellen Zugriff scannen Sie den QR-Code.



Product by
F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Denmark

F&H Group A/S hereby declares that the Wireless Climate Station item number 34197 complies with directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.fh-group.dk

For additional product documentation, please visit jacobjensen.com

Jacob Jensen



This mark on a product and/or accompanying documents indicates that when it is to be disposed of it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be saving valuable resources and preventing potential negative effects upon human health and the environment from hazardous materials that the waste may contain.

Version 01.2024