


# CLASSIC HASSELBACK CUTTER

**EN** Congratulations on your new Hasselback cutter, which creates evenly spaced grooves in a large batch of classic Hasselback potatoes and other vegetables in just seconds. For an even smoother glide, consider spraying a little oil on the blades. Machine wash before use.

**DA** Tillykke med din nye hasselback-skærer, som på få sekunder skærer ensartede riller i en stor portion klassiske Hasselbackkartofler og andre grøntsager. Spray eventuelt lidt olie på knivbladene, så glider det endnu nemmere. Vaskes i opvaskemaskine før brug.

## HOW TO USE THE HASSELBACK CUTTER SÅDAN BRUGES HASSELBACK-SKÆREREN


1

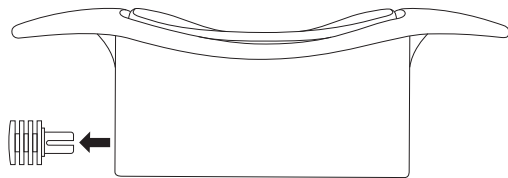

**EN** Pull out the safety button.

**DA** Træk sikkerhedsknappen ud.


2

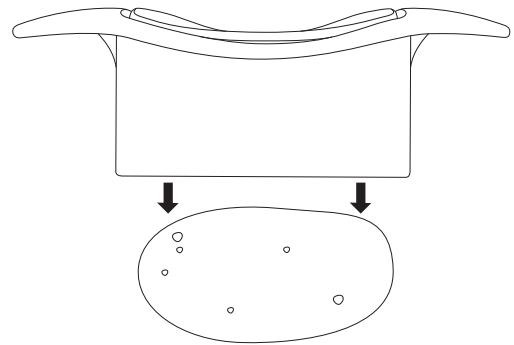

**EN** Press the Hasselback cutter down over the potato.

**DA** Pres Hasselback-skæreren ned over kartofflen.


3

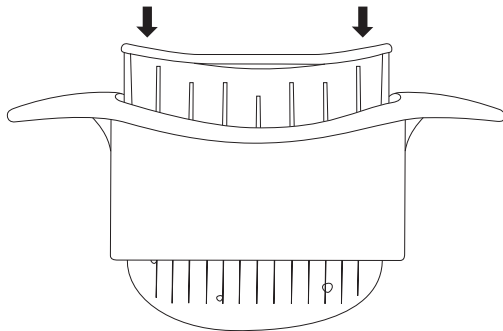

**EN** Press the pusher down to eject the potato.

**DA** Tryk nedstopperen ned, så kartofflen skubbes ud.

4

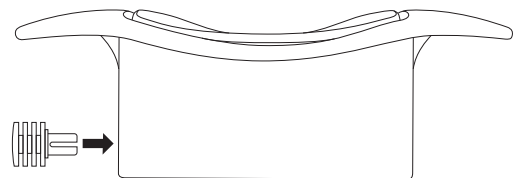

**EN** Reinsert the safety button.

**DA** Sæt sikkerhedsknappen i igen.

**EN** We hope you will be happy with your new Hasselback cutter.

**DA** Vi håber, du bliver glad for din nye hasselback-skærer.



Join us on Instagram, Facebook and YouTube

Instagram Facebook YouTube  
@Rosti\_design

F&H Group A/S  
Gl. Skivevej 70  
DK-8800 Viborg  
[www.rosti.design](http://www.rosti.design)

**Rosti**